


Ford Thick Film Ignition (TFI) Pin-out Detail

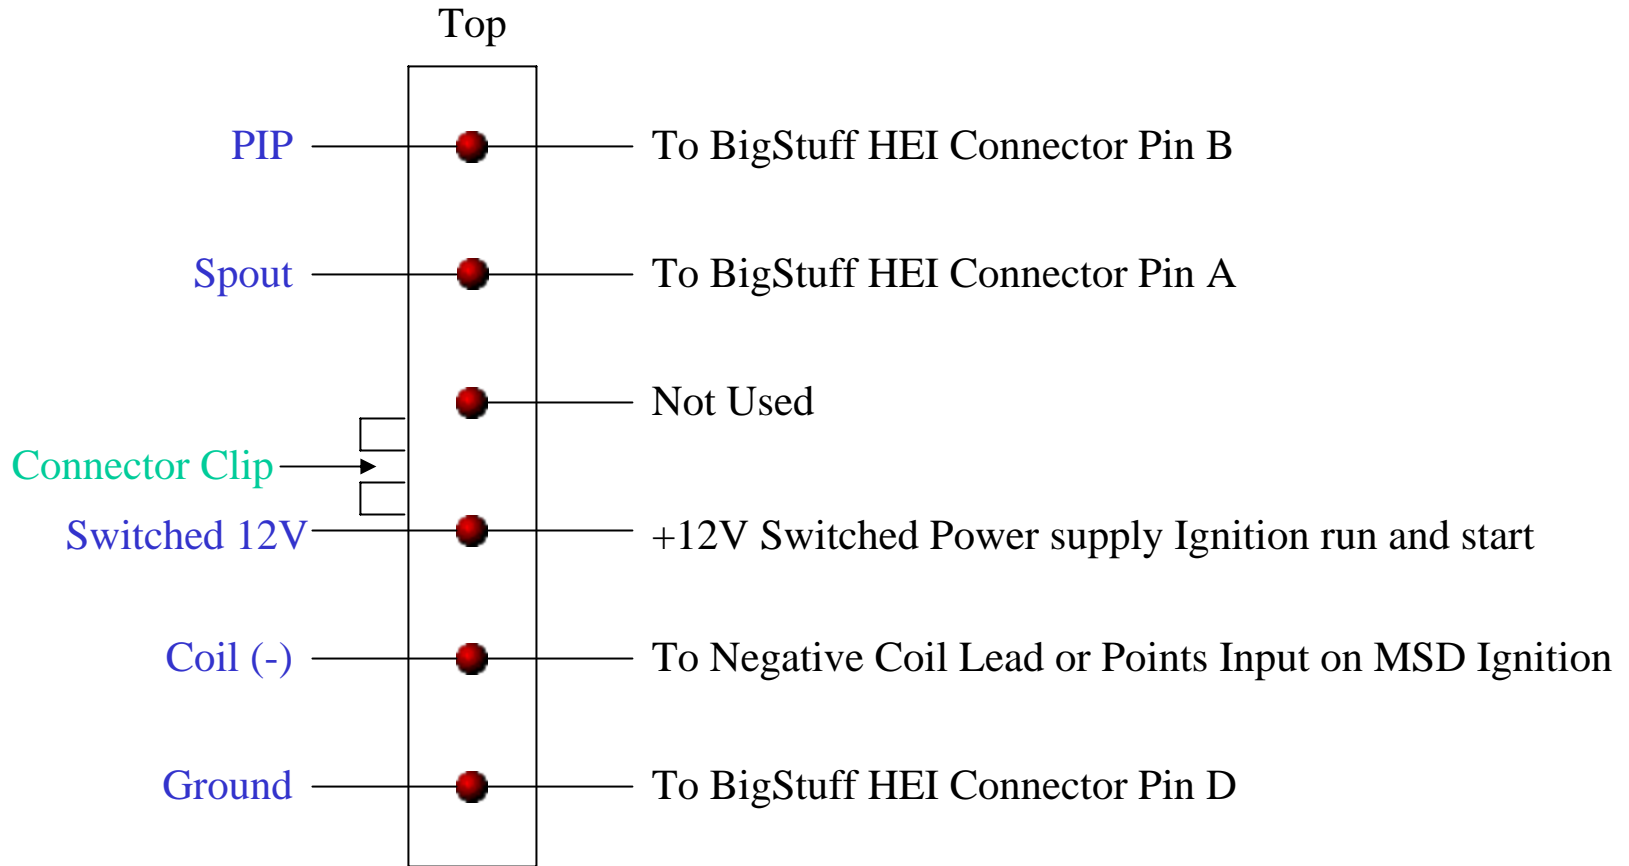

Note: The BigStuff3 “Points” wire & Pin C in the HEI connector are not used with the Ford TFI Ignition!

BS3 Main Wire Harness - HEI Connector

